



# Installation Steps:

1.

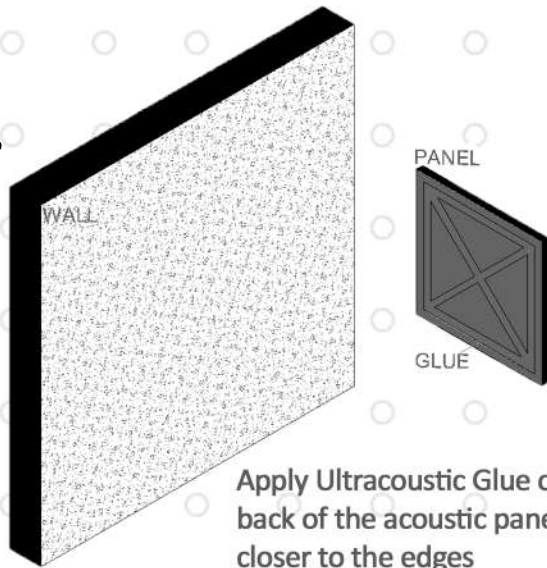


Apply Ultracoustic Glue on the back of the acoustic panel, closer to the edges

2.

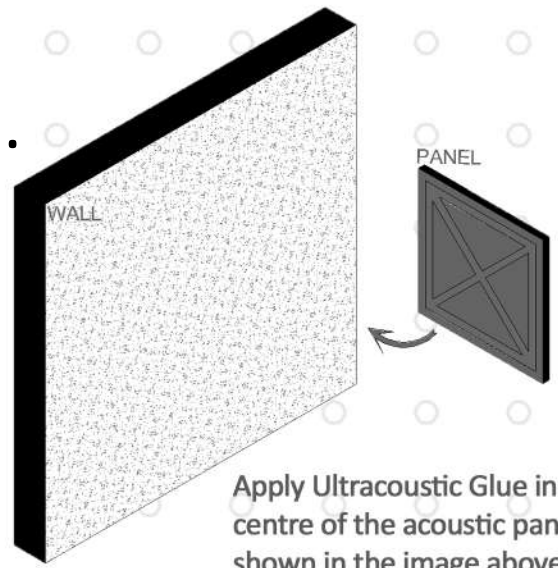


Apply Ultracoustic Glue in the centre of the acoustic panel as shown in the image above.

3.

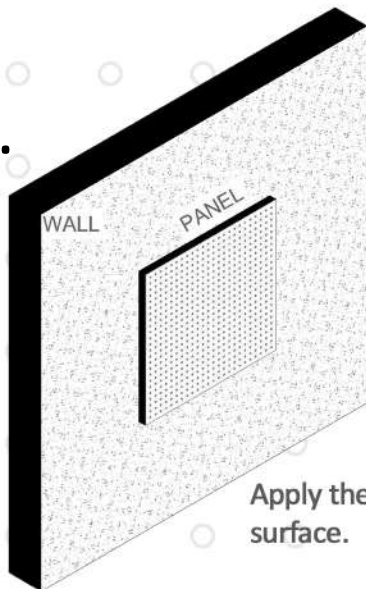


Apply the acoustic panel on the wall surface.

4.

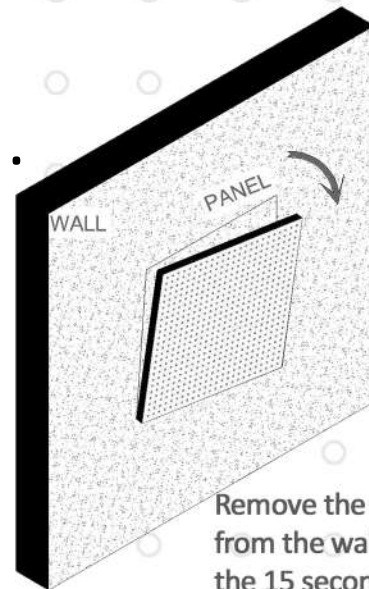


Remove the acoustic panel slightly from the wall surface during the 15 seconds curing time.

5.

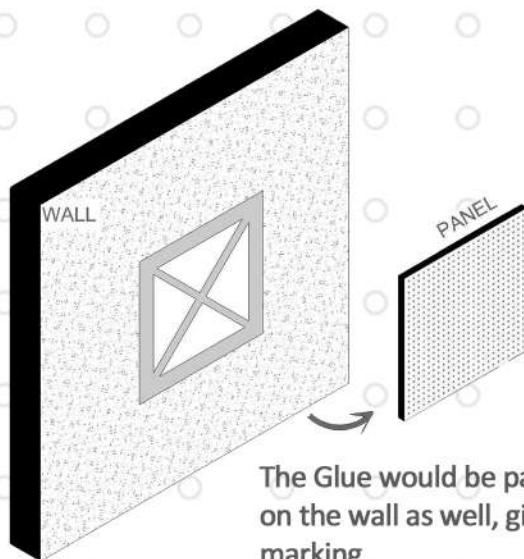

The Glue would be pasted on the wall as well, giving a marking.

6.

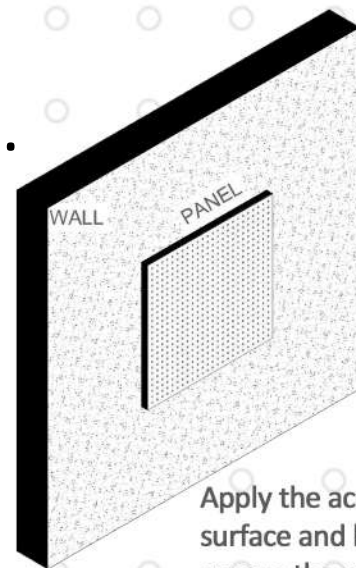

Apply the acoustic panel on the surface and hold for a minute and ensure the panel stays fixed where installed.