Installation Steps:

1 .

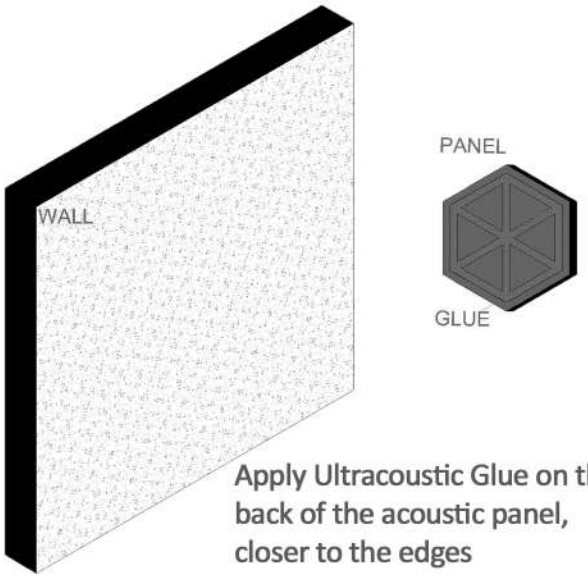

Apply Ultracoustic Glue on the back of the acoustic panel, closer to the edges

2 .

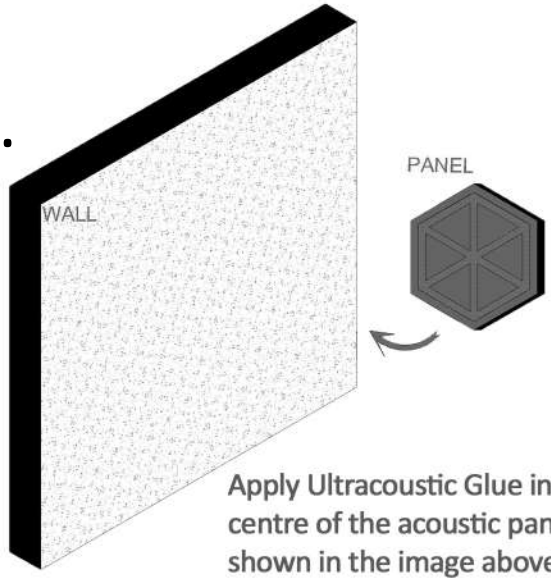

Apply Ultracoustic Glue in the centre of the acoustic panel as shown in the image above.

3 .

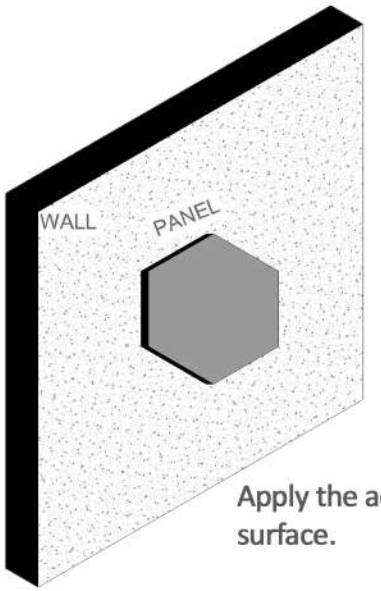

Apply the acoustic panel on the wall surface.

4 .

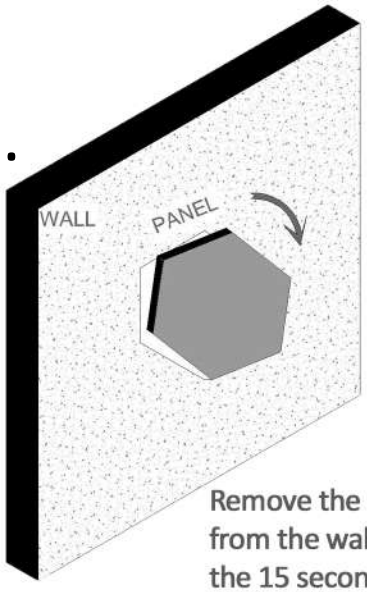

Remove the acoustic panel slightly from the wall surface during the 15 seconds curing time.

5 .

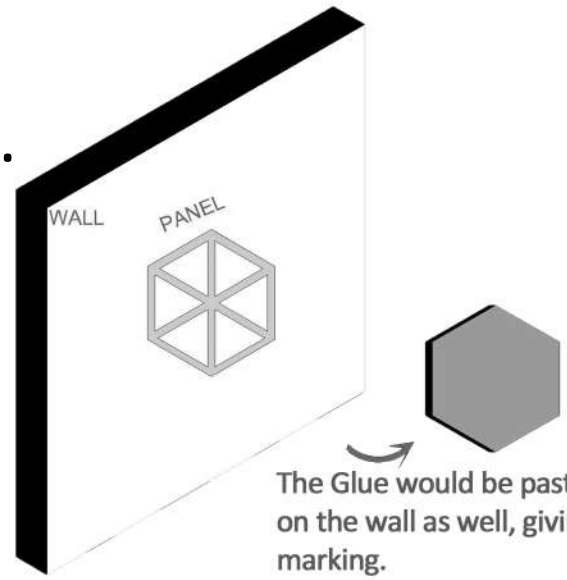

The Glue would be pasted on the wall as well, giving a marking.

6 .

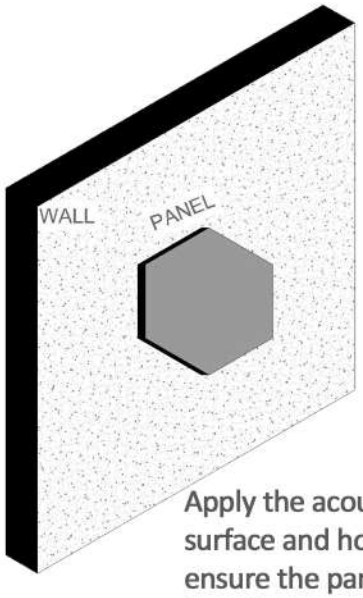

Apply the acoustic panel on the surface and hold for a minute and ensure the panel stays fixed where installed.